



**SAAB****MONTERINGSANVISNING · INSTALLATION INSTRUCTIONS
MONTAGEANLEITUNG · INSTALLATIONS DE MONTAGE****Saab 900 M94-, Saab 9-3****Pedal raising kit**

Accessories Part No.	Group	Date	Instruction Part No.	Replaces
400 111 852 400 111 860 400 111 878 400 111 886 400 111 894	9:52-01	Sep 99	50 61 361	50 61 361 May 99

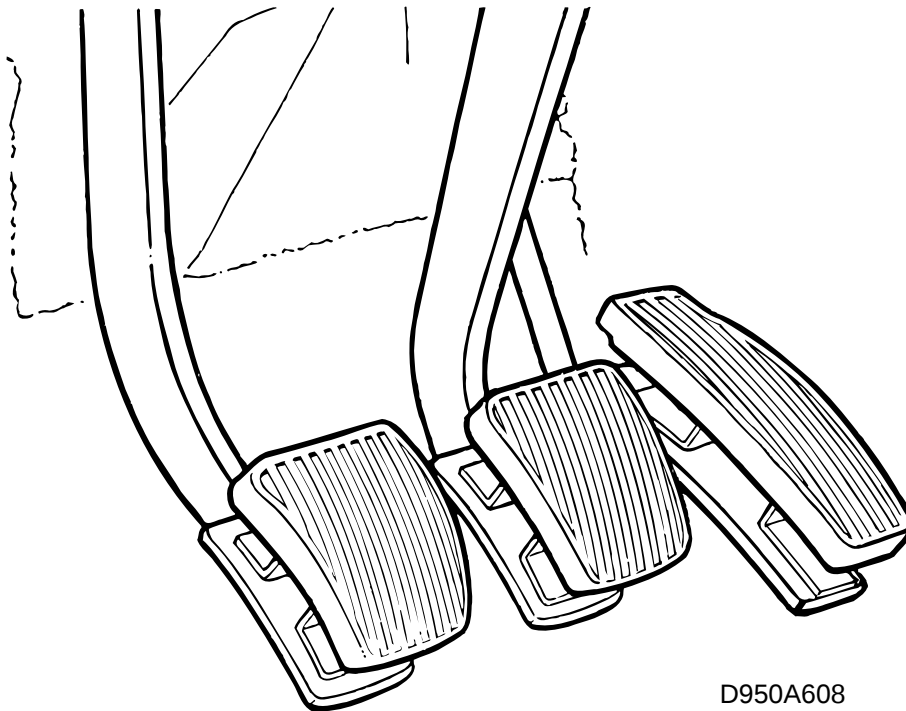

D950A608

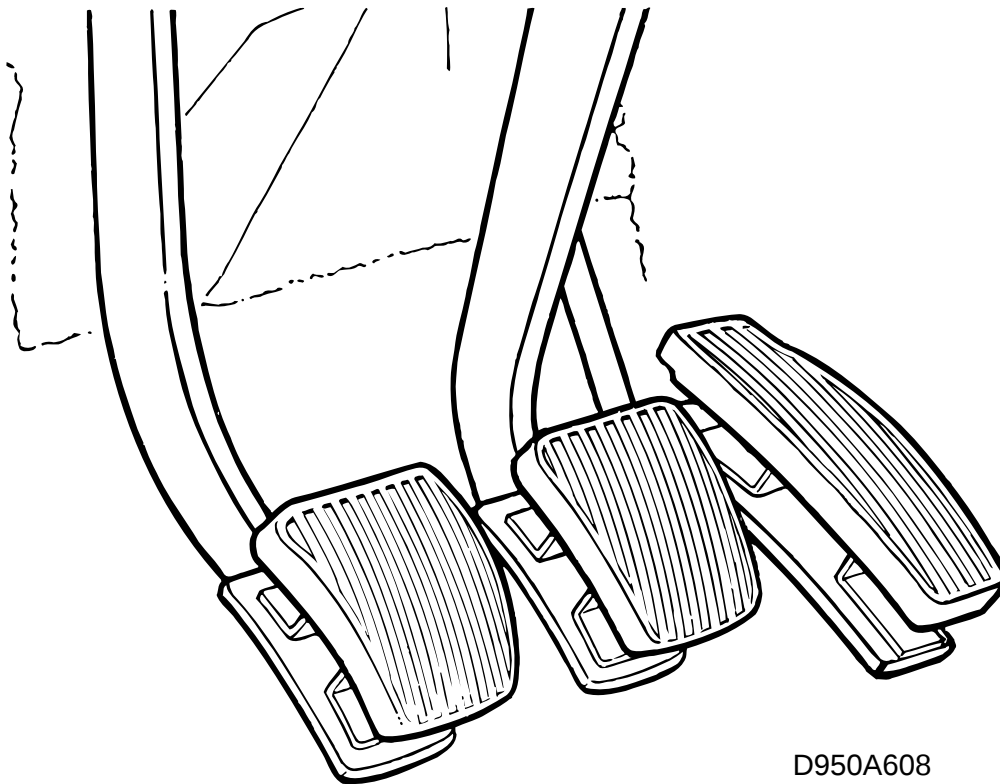

D950A608

- 1 Remove the rubber pads from all the pedals.
- 2 Affix the enclosed drill templates to the pedals with adhesive tape. Mark the position of the holes on the pedal plates and drill the holes at right angles to the pedal plate. Drill with a 3.5 mm bit first and then with a 7 mm bit.
- 3 Fit the rubber pads onto the pedal plates.
- 4 Screw on the pedal plates with the enclosed nuts and bolts.


Tightening torque 9.5 Nm (7 lbf ft)

Note


Make sure the pedal plate for the accelerator pedal is fitted the right way round.



The bracket must be fitted edge-to-edge with the existing pedal.

Template, accelerator pedal LHD

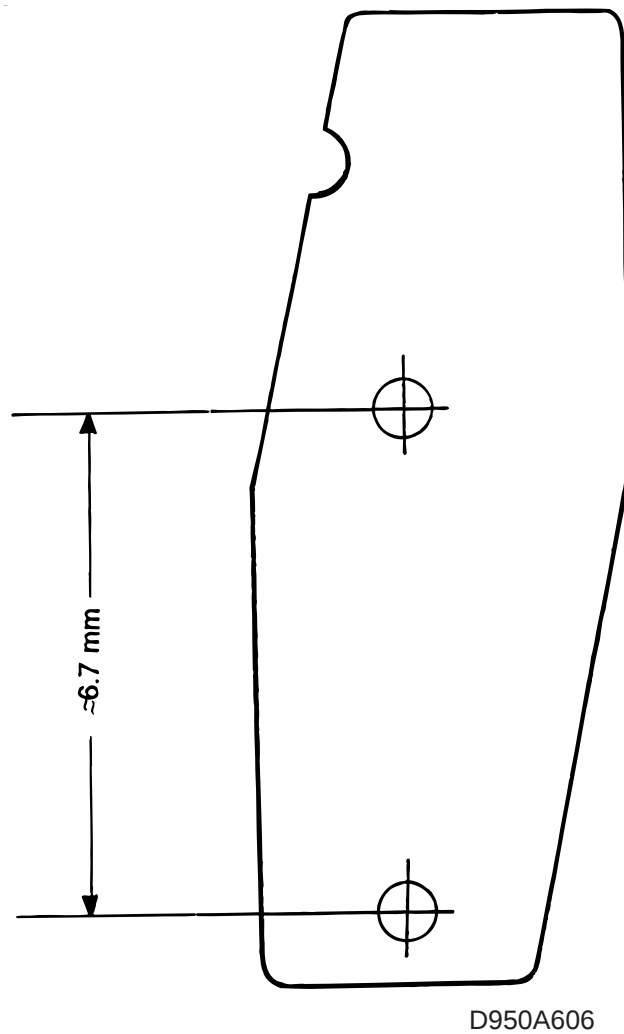


Template, accelerator pedal RHD

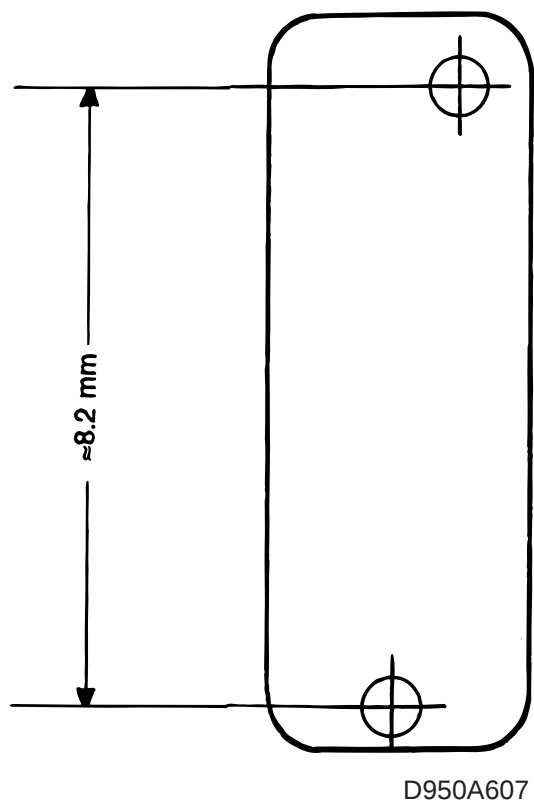

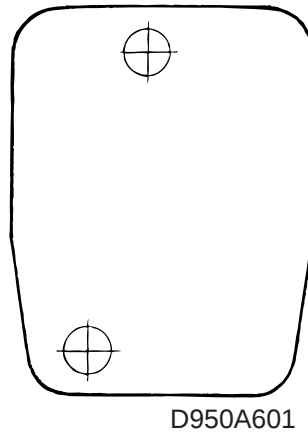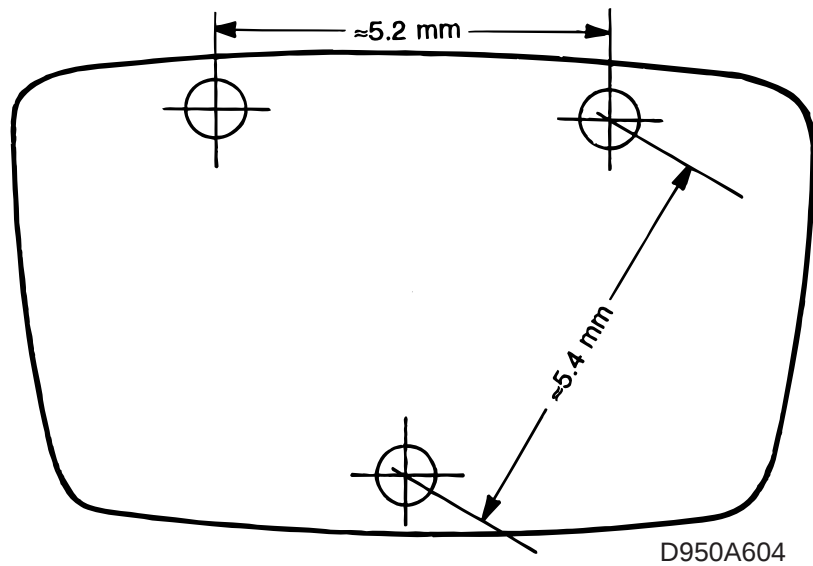
Template, brake pedal LHD, manual gearbox**Template, brake pedal LHD, automatic transmission/Sensonic**

Template, brake pedal RHD, manual gearbox

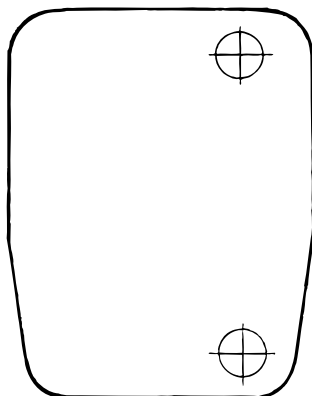


D950A602

Template, brake pedal RHD automatic transmission/Sensonic 900 M94-98 and 9-3 M98 up to and including VIN W2058195 (3D/5D) and W7054083 (CV)

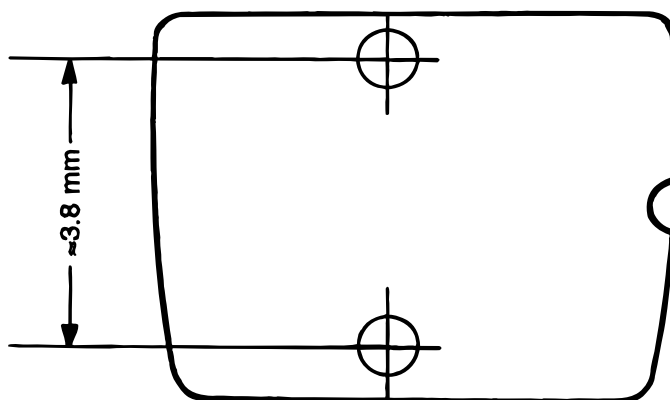


D950A605

Template, brake pedal RHD automatic transmission 9-3 M98 from VIN W2058196 (3D/5D) and W7054084 (CV)

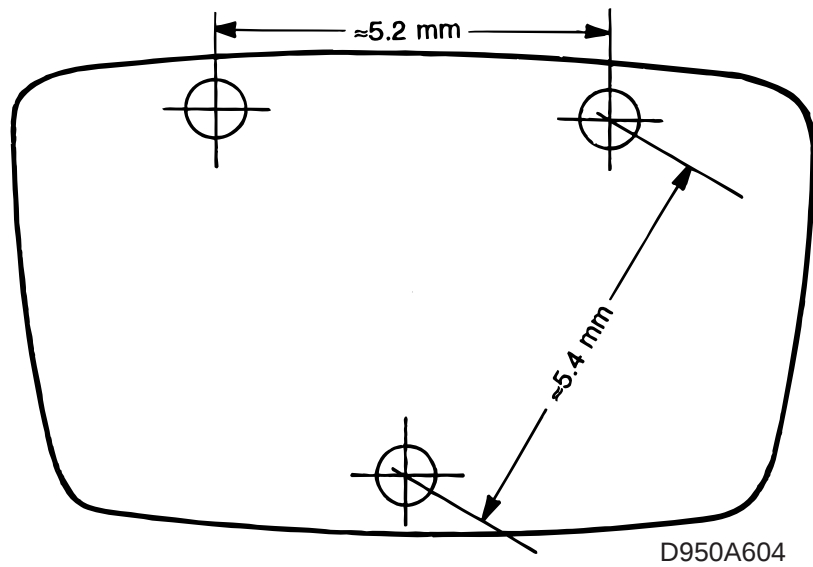


Template, clutch pedal LHD 900 -M97

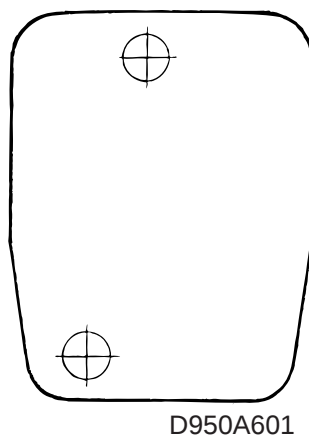


D950A601

Template, clutch pedal LHD 900 M98/9-3

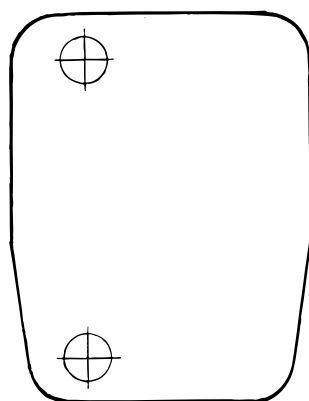

D950A603

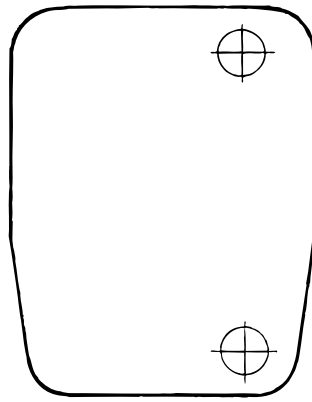Template, clutch pedal RHD

D950A602