



**SAAB****MONTERINGSANVISNING · INSTALLATION INSTRUCTIONS
MONTAGEANLEITUNG · INSTALLATIONS DE MONTAGE****Saab 9-3****Storage net, centre console**


Accessories Part No.	Group	Date	Instruction Part No.	Replaces
400 126 835 400 126 843 400 126 850 400 126 868 400 126 876 400 126 884	9:85-13	Apr 00	86 93 244	86 93 244 Jun 99

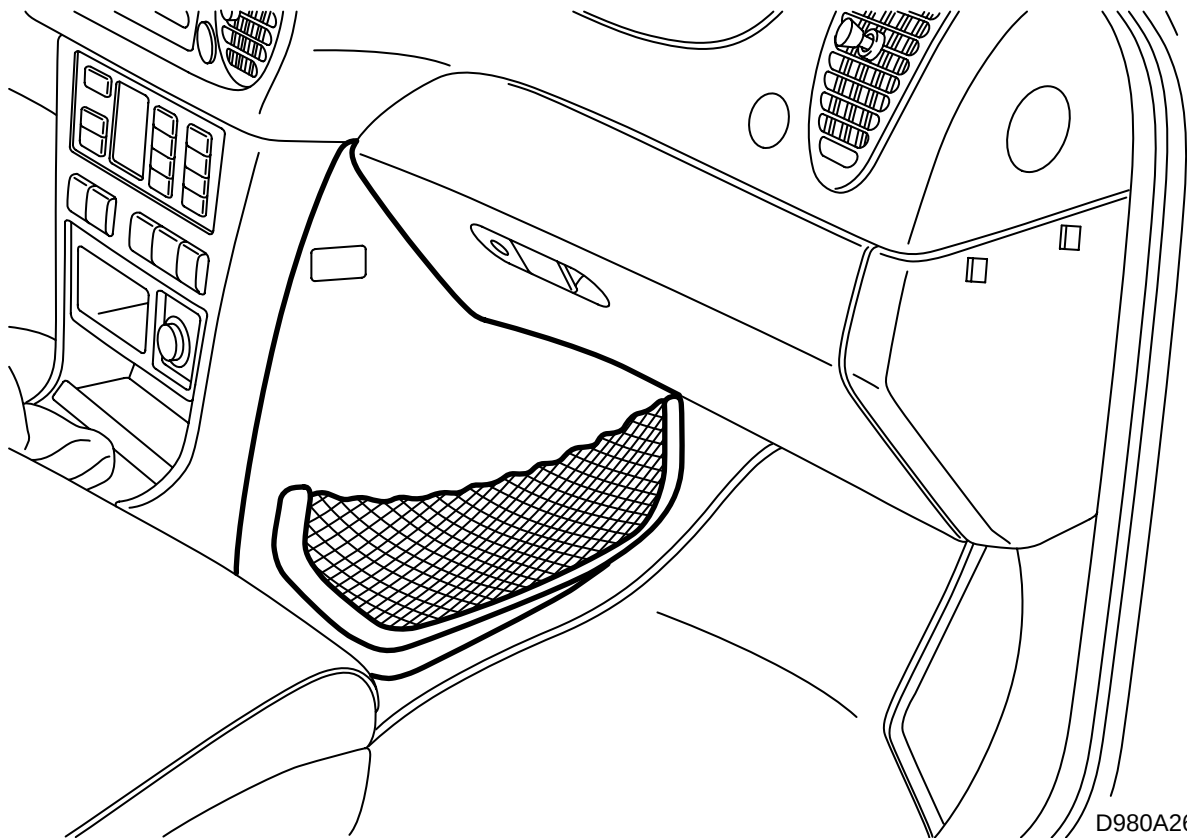

D980A263

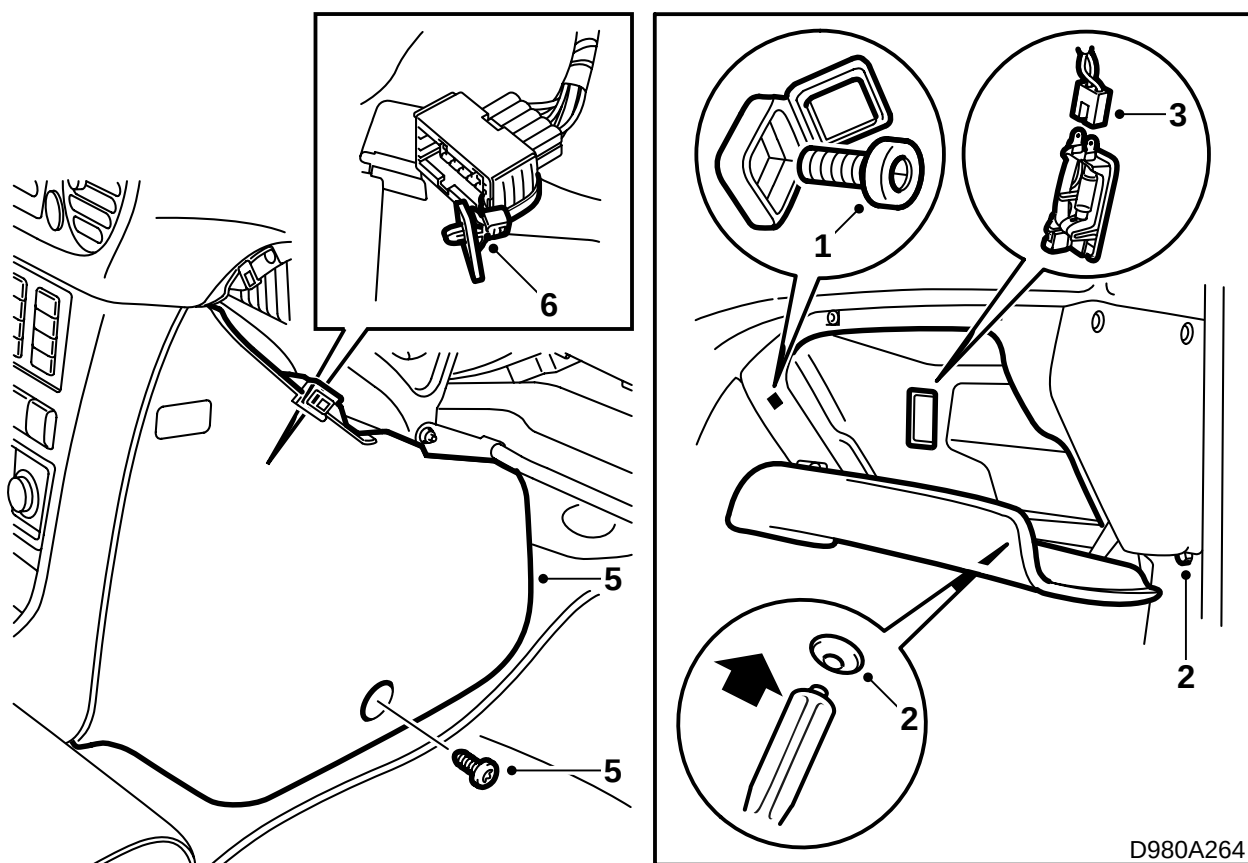

- 1 Open the glove compartment. Open the covers and remove all the retaining screws.
- 2 Remove the retaining bolt and the plastic rivet under the glove compartment. The plastic rivet is removed by depressing its centre with for example the button that can be found on the handle of the screwdriver that belongs to the car toolkit. Remove the glove compartment from the snap fasteners on the bulkhead bracket.
- 3 Pull out the glove compartment and unplug the connector for the glove compartment lamp. Remove the glove compartment.
- 4 Remove any floor mats, e.g. rubber mat, on the passenger side.
- 5 Unscrew the retaining screw and dismantle the side panel by pulling it slightly out from the centre console and forwards into the car.
- 6 Unhook the cable tie from the inside of the side panel.

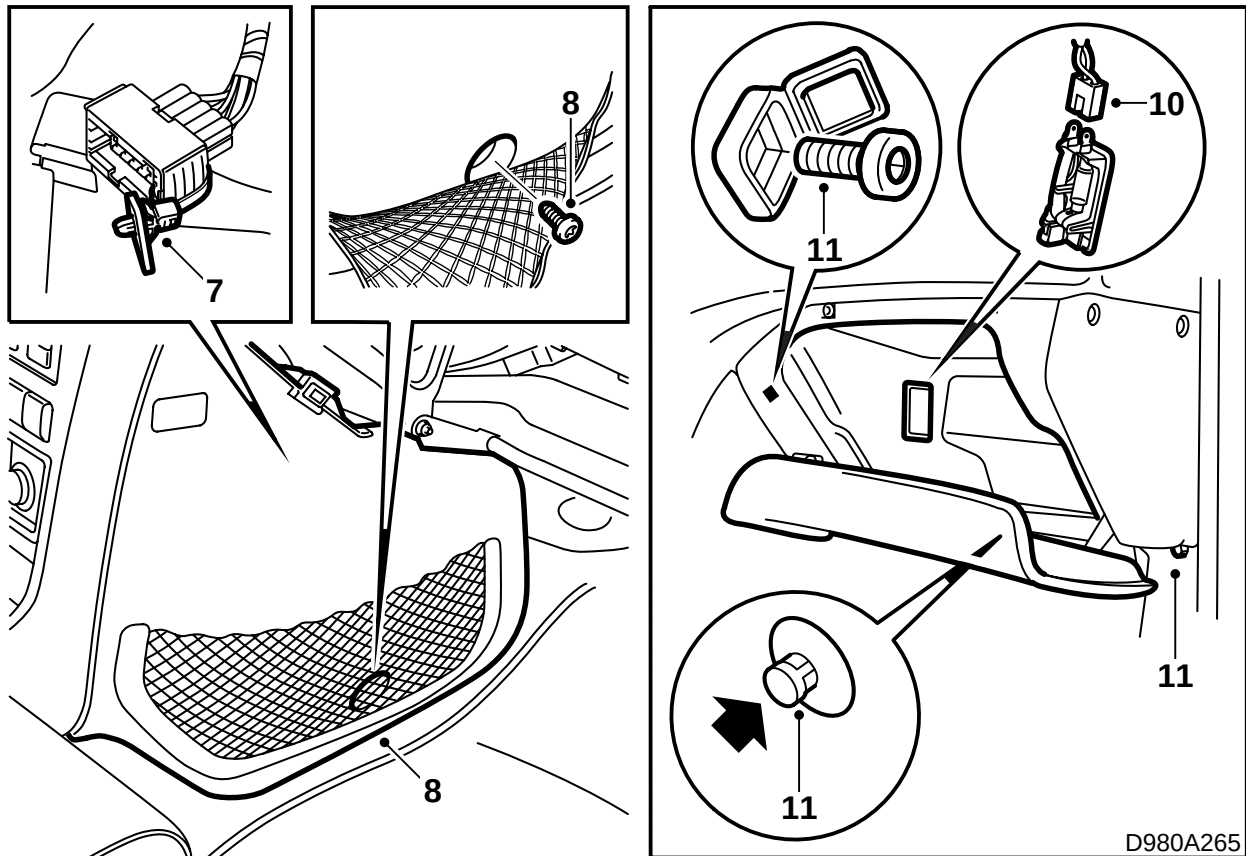

- 7 Secure the cable tie in the inside of the new side panel.
- 8 Mount the side panel, making sure that the catches fit properly, put the storage net to one side and tighten the retaining screw.
- 9 Replace any loose mats e.g. rubber mat, on the passenger side.
- 10 Fit the glove compartment, not forgetting the snap fastener on the bulkhead bracket, and plug in the connector for the glove compartment lamp.
- 11 Mount the retaining screws and retaining bolt. Reset the plastic rivet before mounting by pushing out the centre part approximately 5 mm. Mount the plastic rivet on the underside of the glove compartment and press in the centre part of the rivet, so that it comes level with the rivet collar.
- 12 Close the covers and the glove compartment lid.