


**SAAB****MONTERINGSANVISNING · INSTALLATION INSTRUCTIONS
MONTAGEANLEITUNG · INSTALLATIONS DE MONTAGE**


Saab 900 M94-, Saab 9-3

Stone chip protector for hood (bonnet)

Accessories Part No.	Group	Date	Instruction Part No.	Replaces
400 100 483	8:20-2	Sep 98	86 78 328	75 01 41 Mar 93

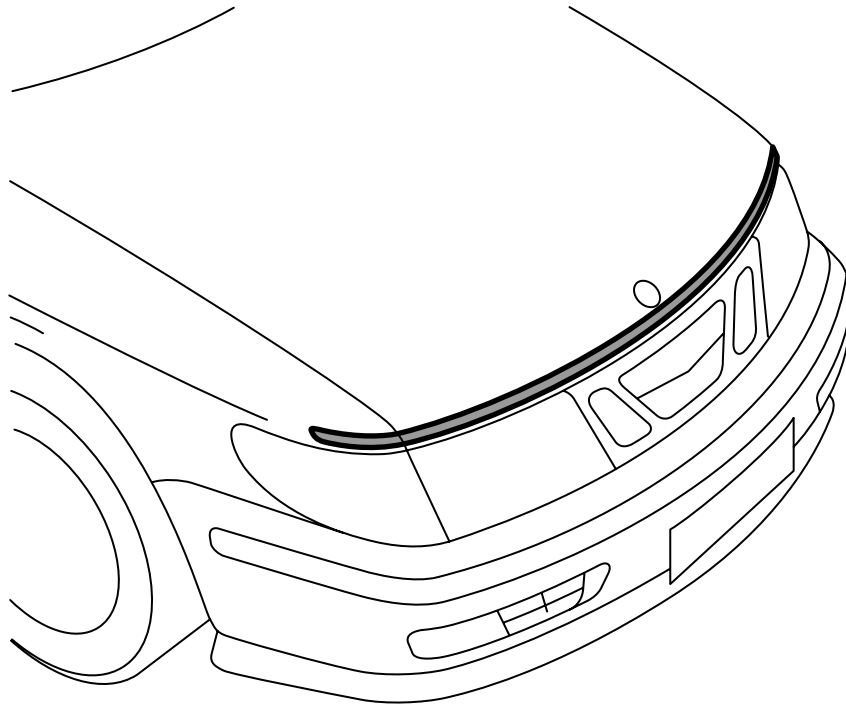

D980A081

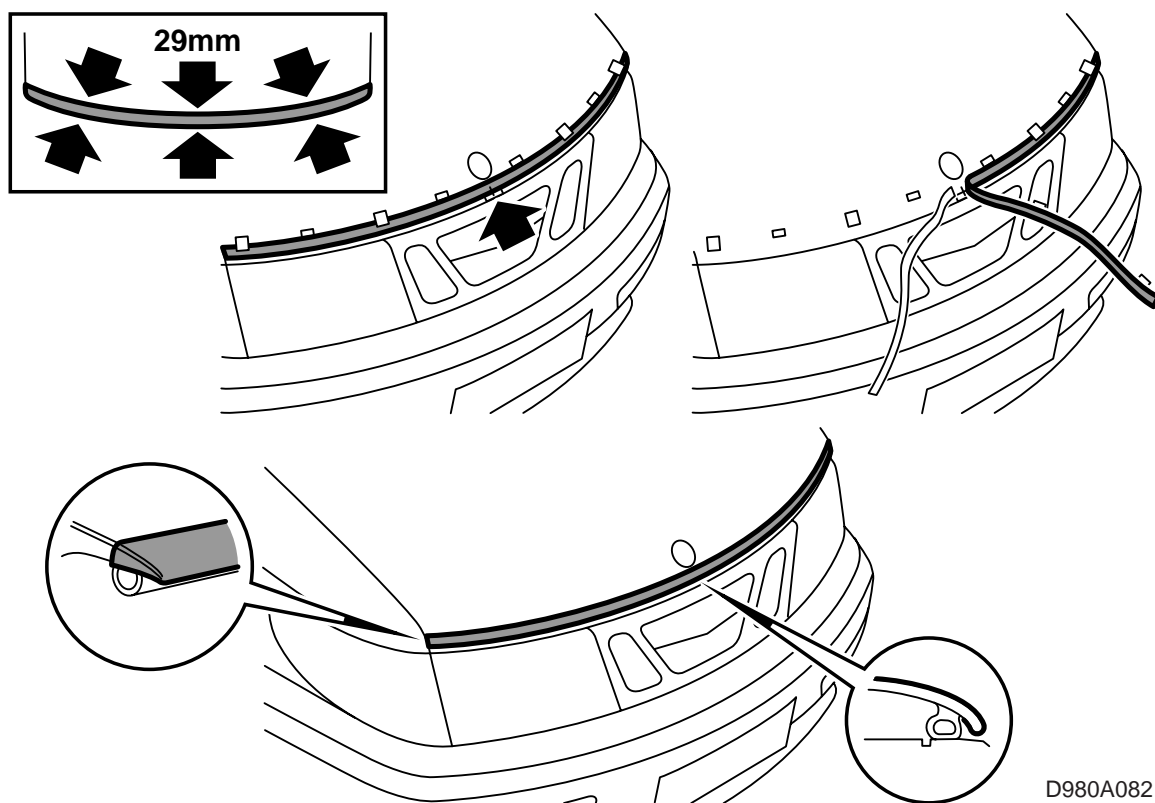

D980A082


Preparations

- 1 Do not fit when temperatures are below +15°C. This applies to the air temperature as well as the temperature of the working surfaces.
- 2 Undo the lamp clusters.
- 3 Clean the surfaces **thoroughly** (even under the front edge of the hood/bonnet) to remove dust, oil, car polish, etc. using a lint-free cloth moistened with methylated spirits. Wipe with a dry rag.

Fitting centre section

- 1 Mark out the centre line with a piece of adhesive tape on the grill.
- 2 Position the centre cut-out in the protector in line with the centre line mark.
- 3 Affix the protector with masking tape along the front of the hood (bonnet).

- 4 Make sure the protector is positioned in a smooth line.
- 5 Affix some pieces of adhesive tape along the top edge of the protector to be used as a reference when fitting.
- 6 Fold up one half of the protector and peel off the backing paper.
- 7 Cut off the backing paper in the centre.
- 8 Position the protector and press down with a plastic scraper.
- 9 Trim away any excess tape at the ends (leave approx. 5 mm).
- 10 Fold in the end of the protector around the front of the hood (bonnet). **Use a hot-air fan!** Make sure there is good adhesion along the edges.
- 11 Affix the other end of the protector in the same way.

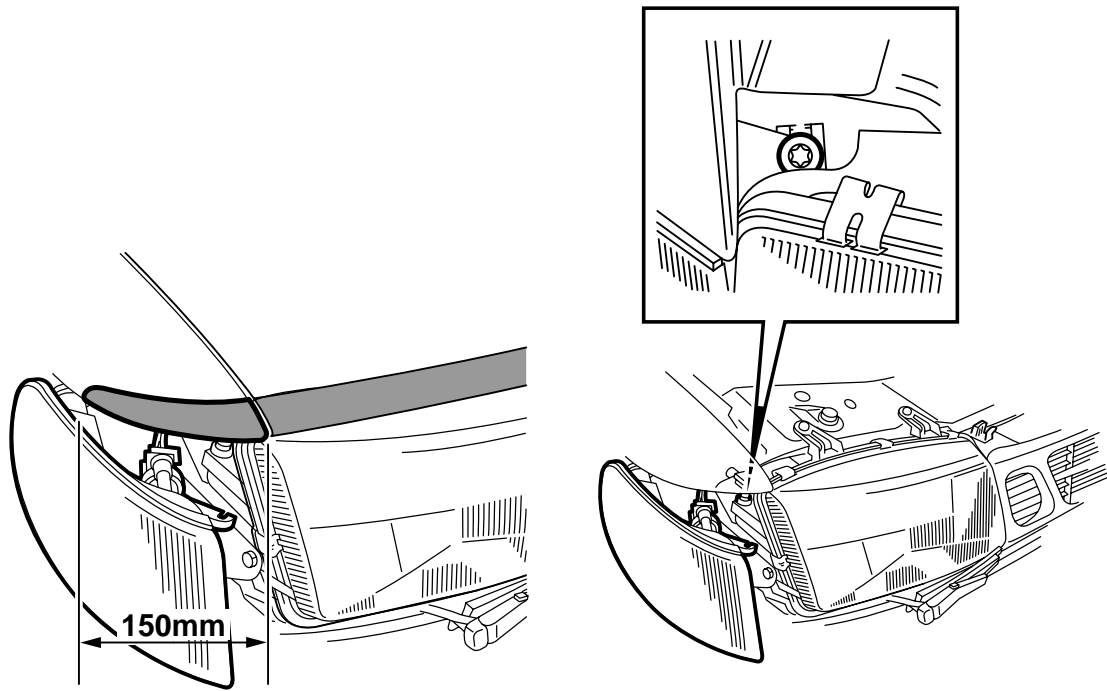

D980A083

Fitting side sections

- 1 Affix the protector above the lamp clusters. Make sure the sections are aligned where they meet.
- 2 Make sure there is good adhesion along all the edges. Fold in the protector around the edge of the panel. **Use a hot-air fan!**
- 3 Refit the lamp clusters.