




**MONTERINGSANVISNING · INSTALLATION INSTRUCTIONS  
MONTAGEANLEITUNG · INSTRUCTIONS DE MONTAGE**

## Saab 9-3 3D/5D -M03


Automatic anti-dazzle rear-view mirror

Accessories Part No.	Group	Date	Instruction Part No.	Replaces
400 133 013	9:85-26	May 03	55 22 289	

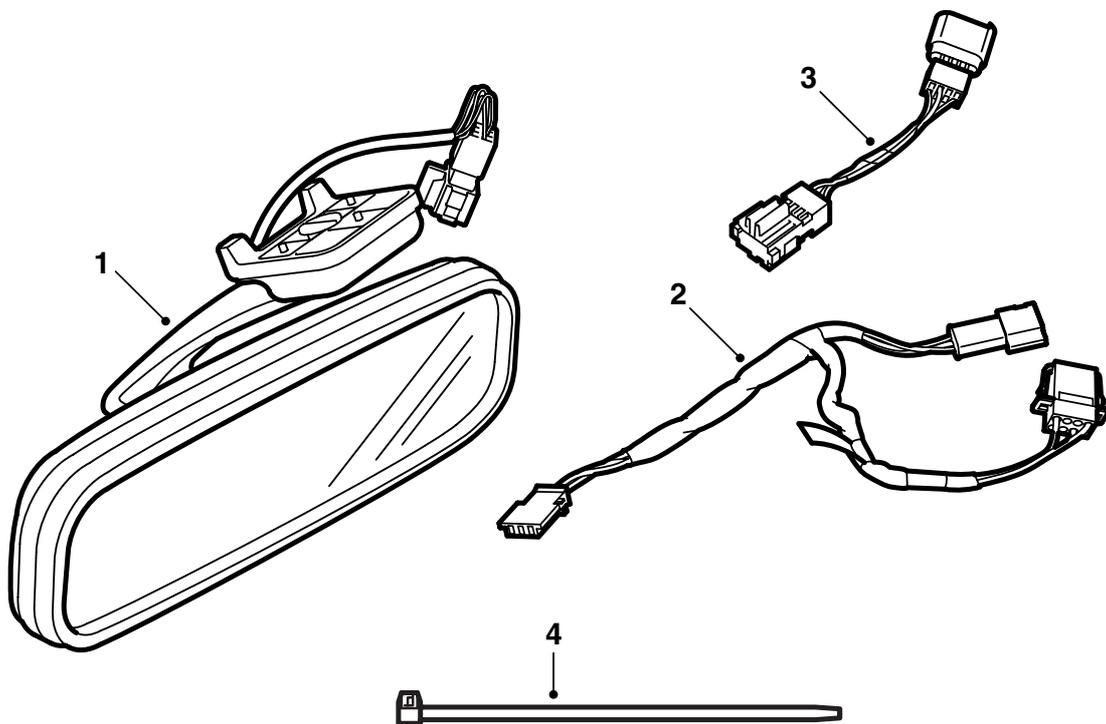


D980A350

- 1 Rear-view mirror (purchased separately)
- 2 Wiring harness
- 3 Wiring harness
- 4 Cable tie

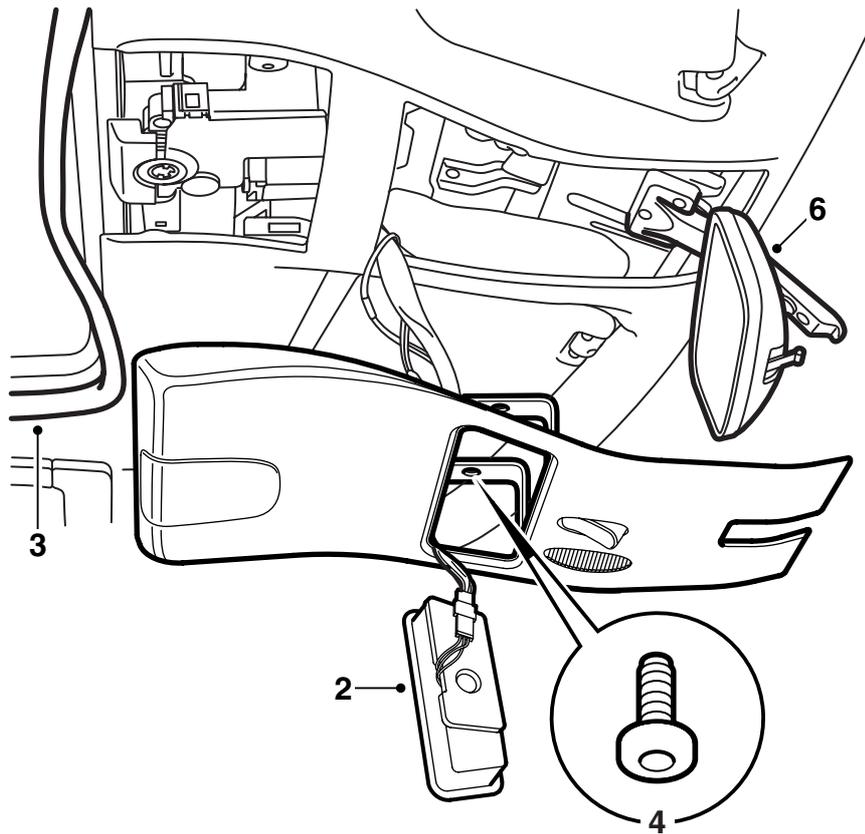

D980A305

- 1 Remove the fuse for the interior lighting.
- 2 Remove the interior light by the rear-view mirror.
- 3 **Cars with sunroof:** Remove the front section of the strip around the sunroof.
- 4 Remove the screws and the light console.
- 5 Unplug the connectors for the microphone and the interior light switch.
- 6 Remove the retaining screws and the mirror.

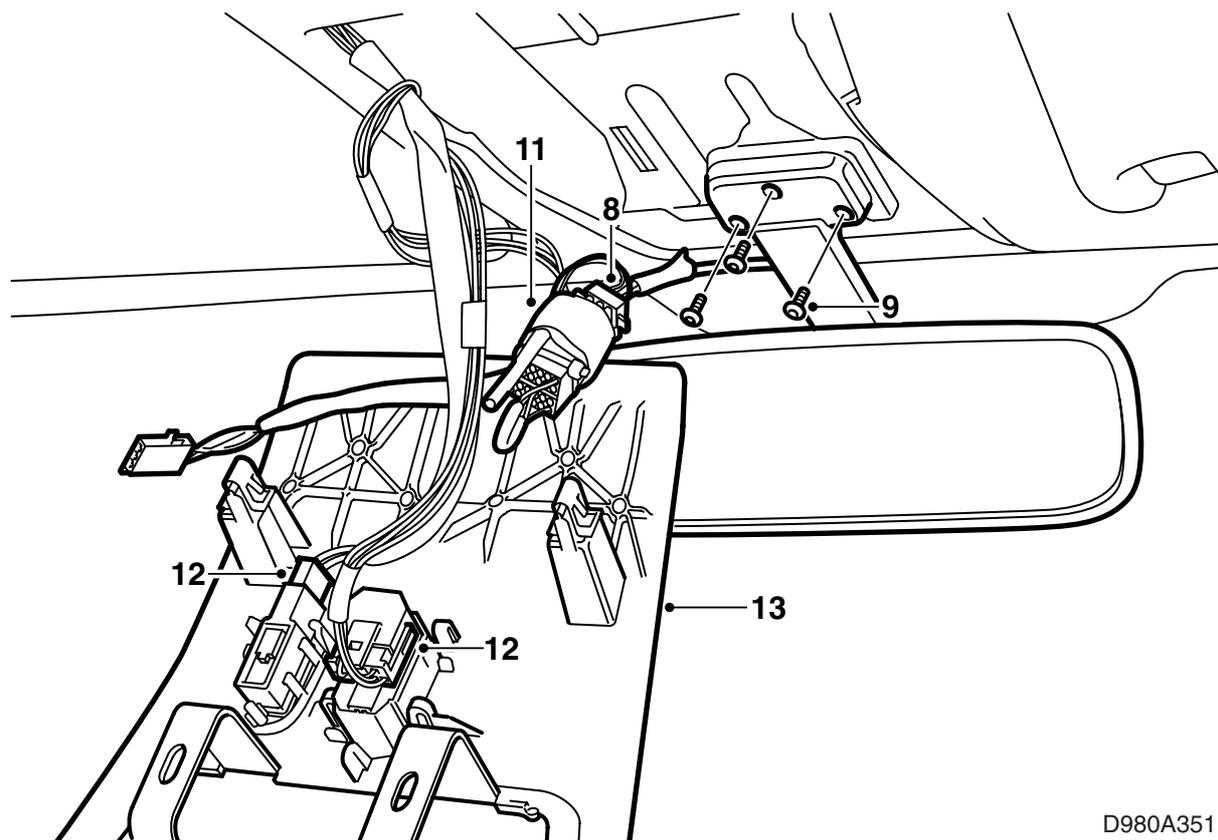

D980A351

7 Carefully remove the tape from one connector on the kit's short wiring harness.

### Important

The tape will be used later.

- 8 Connect both of the kit's wiring harnesses together.
- 9 Connect the wiring harnesses for the kit and the rear-view mirror, and fit the rear-view mirror. The wiring harness must be positioned to the left of the rear-view mirror.
- 10 Connect the wiring harnesses for the kit and the car, and secure the three coupled-up connectors to each other with a cable tie.
- 11 Fit the tape around the three connectors.
- 12 Plug in the connectors for the microphone and the interior light switch.
- 13 Fit the light console.



### WARNING

Make sure the wiring harness is not pinched. Incorrect fitting can damage the cables and cause short-circuits/fire.

- 14 **Cars with sunroof:** Fit the strip around the sunroof.
- 15 Connect the interior light and fit it.
- 16 Fit the fuse for the interior lighting.

17 **Rear-view mirror with compass:** Calibrate the compass, see page 4. If necessary, change compass zone, see page 4.

18 Hand over the installation instructions to the customer and bring attention to the user instructions.

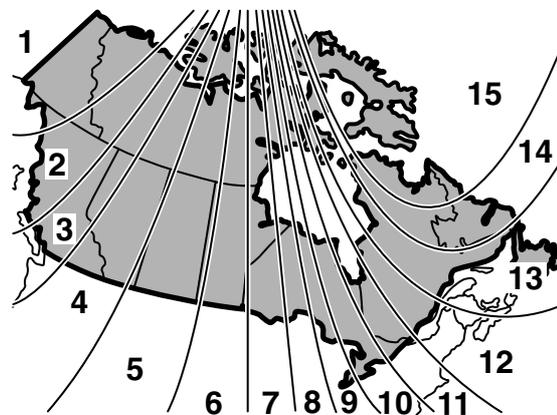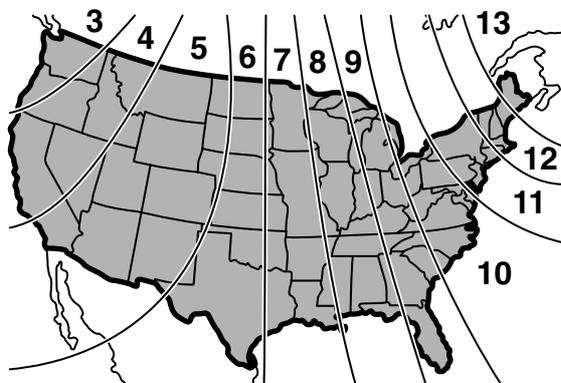

D980A352

## User instructions

The rear-view mirror has two sensors, one facing the front and the other facing the rear. When the front-facing sensor detects that it is dark outside, the system will be activated so that any bright light falling from behind will gradually darken the rear-view mirror to reduce the brightness. As the bright light subsides, the mirror will gradually return to normal.

Automatic anti-dazzle can be switched off using the button under the rear-view mirror. For other questions, refer to the Owner's Manual.

## Calibration/Programming

**Rear-view mirror with compass:** Calibrate the compass by holding the "AUTO" button depressed until "CAL" and a compass point are shown in the compass window. Release the button. Slowly drive the car in a circle until "CAL" disappears. The compass is now calibrated. For other questions, refer to the Owner's Manual.

**Rear-view mirror with compass:** Change the compass zone by holding the "AUTO" button depressed until "ZONE" and a compass point are shown in the compass window. Release the button. You can now change the compass zone using the "AUTO" button (see illustration for compass zone options). Release the "AUTO" button once the correct compass zone has been selected. Once "ZONE" disappears, the compass zone is stored. For other questions, refer to the Owner's Manual.

**Rear-view mirror with garage door remote control:** For programming, see the Owner's Manual.